Motorola M120 Interface

The following items are included in the Motorola M120 interface kit:

- 1. M120 interface cable assembly.
- 2. Cable tie.
- 3. Instruction sheet.

The following steps outline the procedure for interfacing the Motorola M120 radio to the Traklt-20.

1. Set the Traklt-20 up for a bench test and use the AVL Installer program to set the following operating constants in the installer table to the indicated value:

Transmit indicator active: High Receive indicator active: Low PTT output active: Low Enable Tx indicator as event 2: No External output active: Low

External output mode: Speaker mute

2. Configure the following jumpers as indicated:

JP1 Removed JP4 A-B


- 3. Remove the control head and the top and bottom covers of the M120 radio by following the instructions in the M120 service manual.
- 4. Pass the green and red/black wires from the M120 interface cable through the accessory connector hole in the radio chassis before connecting them to points internal to the radio
- 5. Solder the green wire of the M120 interface cable to pin 42 of U802.
- 6. Solder the red/black wire of the M120 interface cable to pin 1 of U501.
- 7. Insert the remaining wires of the M120 interface cable into the radio's accessory connector as follows:

Pin#	Wire
2	Blue
3	White/Black
7	Black/Shield
8	White
11	Orange
13	Red

Motorola M120 Interface (cont.)

- 8. Secure the M120 interface cable to the accessory connector with the cable tie strap and connect the accessory connector to the radio.
- 9. Replace the control head and the top and bottom covers of the radio.
- 10. Connect the DB-15 end of the M120 interface cable to the DB-15 connector on the back of the Traklt-20.
- 11. Check the Traklt-20's audio levels by performing the alignment procedure described in this manual.

Note: If the microphone being used with the M120 radio is a newer version and has power and/or transmit LED's, be aware that it may have an effect on the TX audio level from the TRAKIT-20. The level will change as the microphone is plugged in or removed as it tends to load down the TRAKIT-20's audio output.

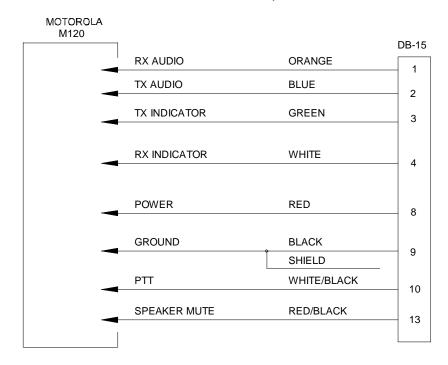

Motorola M120 Interface Cable Kit

ltem	Description	Part No.	Qty.
1	CABLE TIE (SHORT)	200-0081	1
2	SCREW/CLIP KIT	231-0014	1
3	CONN DB15 MALE	231-0035	1
4	COVER DB15	231-0036	1
5	AMP, PINS	234-0096	4
6	CBL, 8 CONN 22 AWG STR	800-1114	1'