

20-28 VoIP

Remote Termination Panel

Version 1.80

Printings

Version 1.00: 7/27/2004
Version 1.01: 9/17/2004
Version 1.10: 2/15/2005
Version 1.11: 3/30/2005
Version 1.60: 4/22/2005
Version 1.70: 8/03/2006
Version 1.80: 11/09/2009

TABLE OF CONTENTS

SPECIFICATIONS	1
1.0 GENERAL DESCRIPTION	2
1.1 Description	2
1.2 Capabilities and Features	2
2.0 INSTALLATION AND SETUP	3
2.1 Inspection.....	3
2.2 Disassembly and Reassembly	3
2.3 Installation Procedure	3
2.4 Radio Connection.....	4
2.5 Ethernet Connections.....	5
2.6 Desk Microphone Connection	5
2.7 Speaker Connection.....	5
2.8 Jumper and Test Point Settings	6
3.0 OPERATION	7
3.1 General	7
3.2 Outputs.....	7
3.3 Local Control Option	7
4.0 PROGRAMMING PROCEDURES	8
4.1 Programming Parameters	8
4.2 Audio Adjustments	15
4.3 Backup/Restore.....	16
4.4 Information/Status	17
5.0 CIRCUIT DESCRIPTION	18
5.1 Power Supply	18
5.2 Transmit Audio	18
5.3 Receive Audio	18
5.4 Outputs.....	18
5.5 Local Control.....	19
5.6 Microprocessor.....	19
5.7 Digital Signal Processor	19
5.8 Ethernet Interface.....	19
5.9 20-28 VoIP Interface Board.....	19
APPENDIX A - RADIO INTERFACES	20
Conventional Binary Interface	20
Trunking Radio Interface.....	21
Additional Radio Interfaces	21
PARTS LISTS	22
SCHEMATICS	27
INSTALLATION DIAGRAMS	28

SPECIFICATIONS

Input Voltage	15 Vdc 24W Wall Transformer 2.1mm * 5.5 mm barrel conn. Center +
Current consumption @ 15 Vdc	450 mA (TX) 800 mA (RX) 400 mA (Standby)
Temperature range	0 to +60 deg C
Relative humidity	90% at 50 deg C
Receive hum & noise	-47 dB (ref. 0 dBm)
Transmit hum & noise	-60 dB (ref. 0dBm) (When using high bit rate codec)
Speaker audio output	1 W into 4 ohms
Distortion (at rated output)	< 3% (When using high bit rate codec)
Frequency response	+1, -3 dB (300 to 3000 Hz)
Weight	1.5 lb.
Dimensions	7.5" x 5.5" x 1.5"

1.0 GENERAL DESCRIPTION

1.1 Description

The Model 20-28 VoIP Remote Termination Panel is designed to control remotely located base stations or repeaters. The 20-28 VoIP Remote Termination Panel also sends update information back to the remotes and provides a two-way audio path. The communication between the 20-28 VoIP Termination Panel and the 24-66 VoIP Remote Controllers is done via a TCP/IP Ethernet connection. The operating characteristics of the 20-28 VoIP panel are modified using a computer through a web browser accessing the appropriate IP address that is assigned to the 20-28 VoIP panel. The 20-28 VoIP panel acts as the master host for all 24-66 VoIP Remotes (up to 20 total) that are connected to it through the LAN / WAN network. As the 24-66 VoIP remotes are connected, the 20-28 VoIP panel sets them up with the appropriate personality profile.

TCP is one of the main protocols in TCP/IP networks, whereas the IP protocol deals only with packets, TCP enables two hosts to establish a connection and exchange streams of data. TCP guarantees delivery of data and also guarantees that packets will be delivered in the same order in which they were sent.

The audio between the panel and the remote(s) can be set up for Multicast and/or Unicast protocols. This option is selected in the System Audio Settings screen of the 20-28 VoIP and in the Profile Configuration screen of the 24-66 VoIP. From a bandwidth standpoint, the Multicast protocol is a much more efficient method of transmitting audio to multiple recipients. All audio is sent and received as UDP data packets. See the installation diagram and description in the back of this manual for more information on configuring for Multicast and Unicast protocols.

For applications that require local operation of the base station, a local control option is available which includes a speaker jack, volume control, and a desk microphone. (Option RTM-604)

1.2 Capabilities and Features

- ◆ PC programmable using WEB Browser
- ◆ G.711, G.723.1, G.726 CODEC algorithms.
- ◆ Non-volatile memory
- ◆ 8 programmable open collector outputs
- ◆ 2 programmable open collector/relay outputs
- ◆ Local control option
- ◆ Remote update
- ◆ Interfaces to various different radios

2.0 INSTALLATION AND SETUP

2.1 Inspection

Please refer to the checklist packed with the 20-28 VoIP in order to become familiar with the unit and to insure that everything ordered has been received. In the event a part is missing from the checklist, please call the Customer Services Department at 1-701-280-1122.

This unit was thoroughly inspected before leaving the factory. If the outer package appears damaged, please inspect the unit for possible damage immediately. Any dents, scratches, or marks suggest rough handling in shipping. Please notify the shipper if you find any indications of mishandling. If there are any concerns about the condition of the 20-28 VoIP when it is received, please don't hesitate to call the Customer Services Department.

2.2 Disassembly and Reassembly

When performing the alignment procedure or making changes to the jumpers on the 20-28 VoIP, it may be necessary to remove the printed circuit board from the case. This is accomplished by removing the two black screws from the front of the 20-28 VoIP and removing the front panel. Remove the top cover by sliding it off the 20-28 VoIP. Since the printed circuit board contains sensitive circuitry, be sure to take the necessary precautions against static discharge.

To reassemble the 20-28 VoIP, replace the top cover and the front panel, making sure the front and back panels are seated properly with the case. Replace the two black screws but do not over-tighten them.

2.3 Installation Procedure

This section provides a basic step-by-step installation procedure for the 20-28 VoIP. Refer to sections **2.4 - 2.8** for detailed installation information. Refer also to the 20-28 VoIP installation diagram in the back of this manual. Detailed information on adjusting the 20-28 VoIP audio levels can be found in section **4.0 Adjustment Procedures**.

1. The system should initially be set up and tested on the bench. Use only one remote at first. Additional remotes can be added later.
2. Connect the 20-28 VoIP to the base station radio. Be sure to program the base station radio as required.
3. Set the 20-28 VoIP jumpers as required.
4. Program the 20-28 VoIP and the remote to allow the remote to control the base station radio as desired. See the programming procedure for the 24-66 VoIP and for the 20-28 VoIP.

2.3 Installation Procedure (cont.)

5. Connect the optional wall transformer power supply to power connector on the back of the 20-28 VoIP. If power is being supplied to the 20-28 VoIP from the radio, make sure the radio's switched B+ output can supply the necessary current. Also, JP6 must be in the correct position. Position AB is for power from radio and position BC is for power from the optional wall transformer.
6. Connect the TCP/IP Ethernet connection to appropriate connector on the back of the 20-28 VoIP. If the connection being used is also to be shared with an existing computer, the computer can be connected to the computer Ethernet connector on the back of the 20-28 VoIP. This allows the 20-28 VoIP and the computer to share one network cable. The green link LED on the Ethernet connector should turn on showing a connection to the network. Refer also to the 20-28 VoIP installation diagram in the back of this manual.
7. Connect a 24-66 VoIP remote to the network. The 20-28 VoIP panel will configure the remote with the appropriate profile.
8. Receive audio from the base station radio should now be heard at the remote.
9. Press PTT on the remote. The remote should key the base station radio reliably.
10. The remote should also be able to control radio functions such as change channels or systems and groups on the base station radio if the system is configured for that.
11. If the local control option is installed in the 20-28 VoIP, connect the desk microphone to the 20-28 VoIP and press the PTT button to verify that the radio transmits.
12. If the local control option is installed in the 20-28 VoIP, connect a 4 ohm speaker to the 20-28 VoIP. Remote audio should be heard in the speaker when PTT on the remote is pressed. Adjust the volume control on the front of the 20-28 VoIP as desired.
13. Program any additional remotes as required. Generally, they should be programmed the same as the first remote. See the programming procedure for the 24-66 VoIP and for the 20-28 VoIP.
14. Connect additional remotes to the network
15. Adjust the transmit and receive levels of the remotes as required. Audio from all remotes should be set to the same level. Refer to **Section 4.2 for Audio Adjustments**.

2.4 Radio Connection

The DB-25 connector labeled "RADIO" on the back of the 20-28 VoIP is used to interface the 20-28 VoIP to a base station radio. For the pin functions on the DB-25 connector, refer to the 20-28 VoIP installation diagram in the back of this manual. In addition, **Appendix A** contains interface information for connecting the 20-28 VoIP to radios.

2.5 Ethernet Connections

The 20-28 VoIP allows Remote Control of a base station via an Ethernet LAN. A computer can also be connected to a remote that is on the same LAN to allow the computer access to the network without the need for a hub.

The Ethernet connectors are found on the back of the 20-28 VoIP. The Ethernet cable should be a standard cable that is available anywhere that telephone and computer accessories are sold. Refer also to the 20-28 VoIP installation diagram in the back of this manual.

2.6 Desk Microphone Connection

If the local control option is installed in the 20-28 VoIP, the desk microphone should be connected to the modular jack labeled "LOCAL MIC" on the front of the 20-28 VoIP. The connections that the local microphone jack provides are detailed in Figure 1.

20-28 Front View - Local Control Option Only

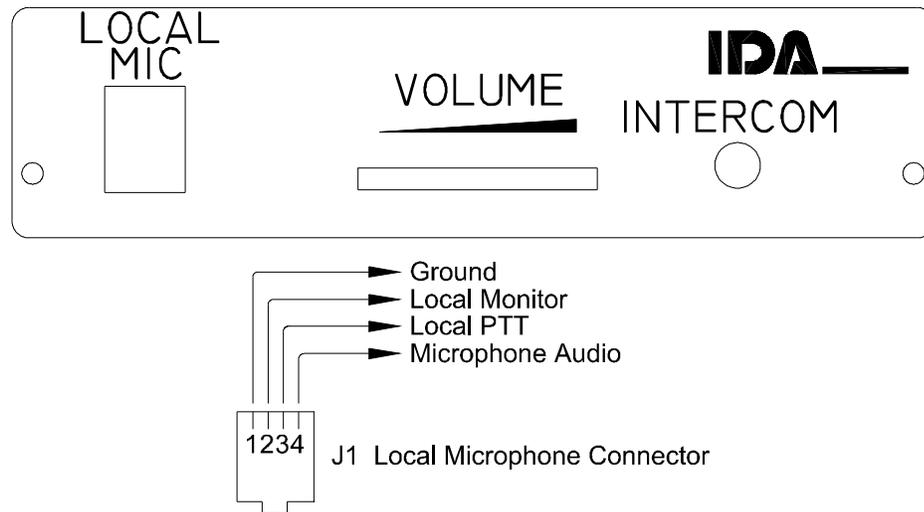


Figure 1

2.7 Speaker Connection

If the local control option is installed in the 20-28 VoIP, a speaker can be connected to the 20-28 VoIP to allow audio to be heard. A 4 ohm speaker (supplied by the user) should be connected to the speaker plug supplied with the 20-28 VoIP. The speaker plug should then be inserted into the jack labeled "SPEAKER JACK" on the back of the 20-28 VoIP.

2.8 Jumper and Test Point Settings

The 20-28 VoIP has a test point, number of jumpers, and switches located on the **INTERFACE BOARD** that controls the operation of the 20-28 VoIP. The jumpers and their settings are described below.

SW1 Position A is for logic level serial interface.
Position B is for RS485 level serial interface.

JP 5 IN for LOW TX Audio impedance.
OUT for HIGH TX Audio impedance.

JP 6 * AB for POWER from radio
BC for Power from External Wall Transformer

JP 7 AB for open collector output 9.
BC for relay output on output 9.

JP 8 AB for open collector output 10.
BC for relay output on output 10.

* If using POWER from the radio and not the EXTERNAL WALL TRANSFORMER, make sure the radio can provide the current needed by the 20-28 VoIP. The default is BC for POWER from the WALL TRANSFORMER.

TP 4 (Test Point 4) allows the panel's network address (including subnet and gateway) to be reset to factory defaults.

To begin, disconnect (or verify disconnection of) power. With power removed, connect a jumper wire between (ground) the housing of the RJ45 jack (J1 or J6) and TP4. Once this connection is made, apply power. With power applied, the LED on the main board D6 should turn on, turn off, and then turn on again. At this point, the network address has been reset and the panel is rebooting, so remove the jumper wire between the RJ45 jack and TP4. The panel should finish rebooting.

The network address of the panel is now:
IP Addresss: 10.0.0.200
Subnet Mask: 255.255.255.0
Gateway: 10.0.0.40

3.0 OPERATION

3.1 General

Once the installation is complete, the 20-28 VoIP panel will communicate with the 24-66 VoIP remotes via Ethernet TCP/IP protocol. The remotes will be able to control the functions of the radio such as transmit and channel selection, as well as receive and transmit audio.

3.2 Outputs

The 20-28 VoIP contains 10 open collector outputs. Two of these outputs, outputs 9 and 10, can also be switched to relay outputs. The outputs are available as general purpose outputs and can be programmed as active high or active low and also as timed outputs. The outputs are controlled by the remote, which can enable or disable any number of outputs with a single update sequence.

3.3 Local Control Option

The local control option allows local control of the base station radio. This option provides a speaker jack, volume control, a desk microphone, and other associated circuitry. When PTT is pressed on the desk microphone, the 20-28 VoIP will key the base station radio. Audio from the desk microphone will be passed to the base station radio for transmission and will also be sent to the network so that the remote users can hear the transmission. If the intercom switch on the front panel of the 20-28 VoIP is depressed, the 20-28 VoIP will not key the base station radio when PTT is pressed on the desk microphone. Instead, the audio from the desk microphone will only be sent to the network to allow the local user to intercom to the remotes.

A 4 ohm speaker can be connected to the speaker jack to allow the local user to hear audio from a remote that is transmitting. Audio from a remote in intercom mode will also be heard through the speaker. Receive audio from the base station radio can also be passed to the speaker. This allows the local user to hear transmissions from other radios through the local speaker instead of through the speaker of the base station radio. The volume control on the front of the 20-28 VoIP allows the local user to adjust the speaker volume to a comfortable listening level.

4.0 PROGRAMMING PROCEDURES

All audio and configuration adjustments are done using a web browser directed at the IP Address that is assigned to the 20-28 VoIP.

The following will explain the adjustment procedure for the 24-66 VoIP. Most audio levels are factory preset and will, in most cases, not need adjustment. All of the audio adjustment are accessible from a computer using a web browser. The default address is 10.0.0.200 with the subnet of 255.255.255.0. The IP address and the subnet address will need to be changed to connect to your network. The user name is "admin" and the default password is "idacorp". Once you logon you should change the password to something else to protect your system. If you are configuring multiple 20-28 VoIP Panels or 24-66 VoIP Remotes, you may need to reset the computer NIC card or restart the computer if the next 24-66 VoIP your computer is connected to does not respond. The following will explain the adjustment procedure for the 24-66 VoIP.

4.1 Programming Parameters

All of the programming and audio parameters are accessible through a WEB browser on a PC that is on the network accessing the IP Address that is assigned to the 20-28 VoIP. The default IP Address is **10.0.0.200**. The default account name is **admin**. The default password is **idacorp**. It is suggested that the password be changed to protect the system. Refer to the Help screens under each of the configuration parameter headers for more information on programming options.

Network

The screen below shows the Network Configuration Parameters.

The screenshot shows a web browser window titled "IDA 20-28 VoIP Panel Setup - Windows Internet Explorer". The address bar shows "http://10.0.0.170/page_network.htm". The page content includes the IDA Corporation logo and a navigation menu on the left with buttons for Network, Radio, Outputs, Action, Channel, Remote, Audio, Backup, and Information. The main content area is titled "Network Configuration" and contains two sections: "Unit Identification" and "Network Identification".

Unit Identification	
Unit Name:	<input type="text" value="Pan 170 Kory"/>
MAC Address:	<input type="text" value="00:50:C2:37:A1:4D"/>
	<input type="button" value="Change Password"/>


Network Identification	
IP Address:	<input type="text" value="10"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="170"/>
Subnet Mask:	<input type="text" value="255"/> . <input type="text" value="255"/> . <input type="text" value="255"/> . <input type="text" value="0"/>
Gateway:	<input type="text" value="10"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="1"/>

At the bottom of the form are two buttons: "Save Changes" and "Save Changes and Reset Unit".

4.1 Programming Parameters (cont.)


Radio

The screen below shows the Setup Radio tab.

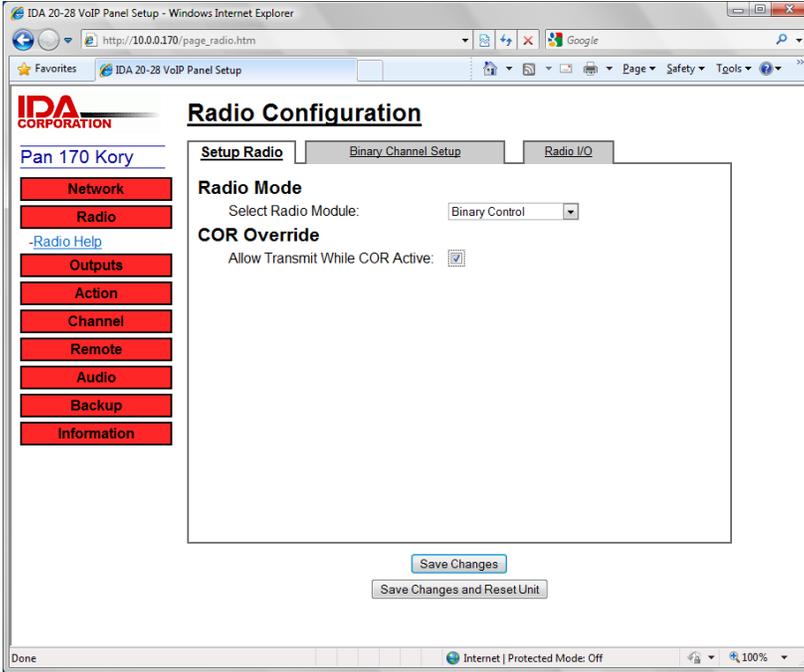

Radio


The screen below shows the Binary Channel Setup tab.

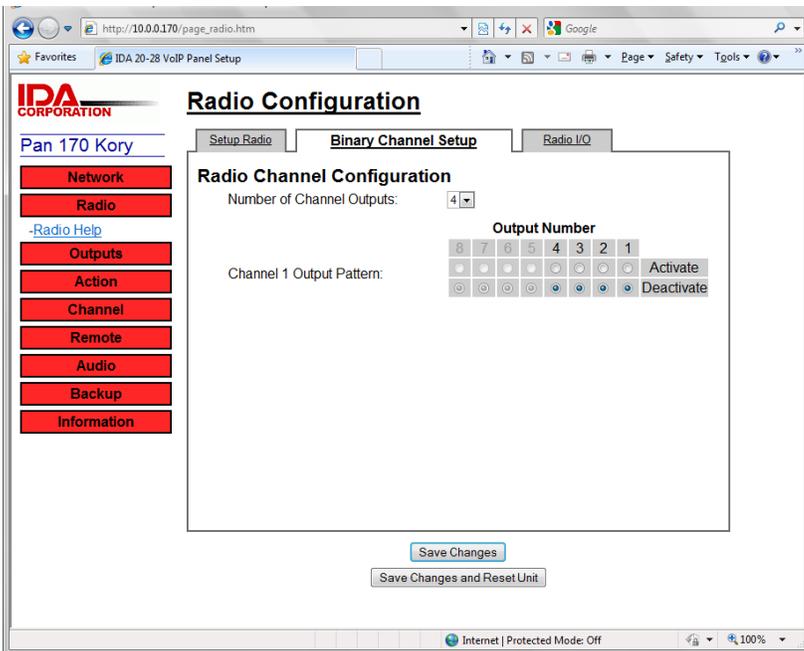

4.1 Programming Parameters (cont.)


Radio

The screen below shows the Radio I/O tab.

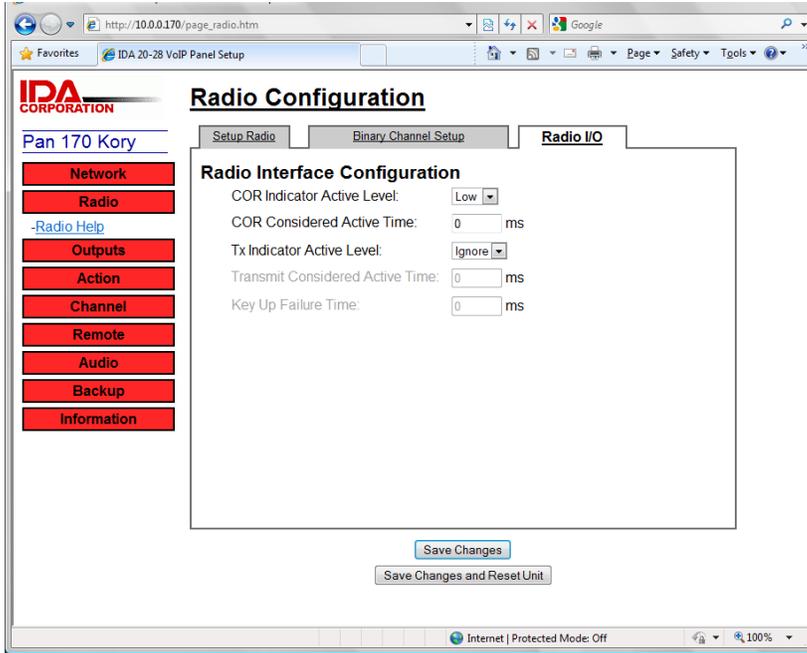

Output


The screen below shows the Output Parameters.

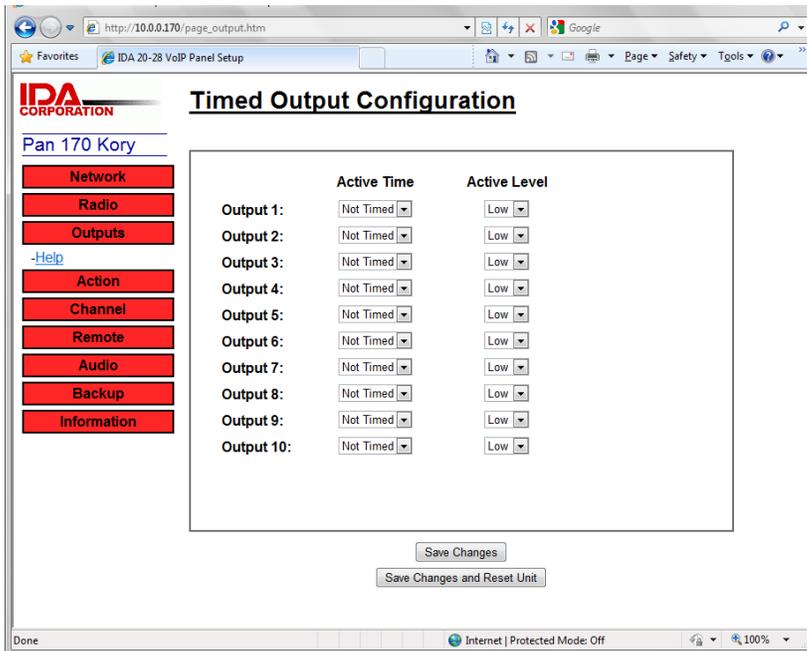

4.1 Programming Parameters (cont.)


Action

The screen below shows the Action Parameters.

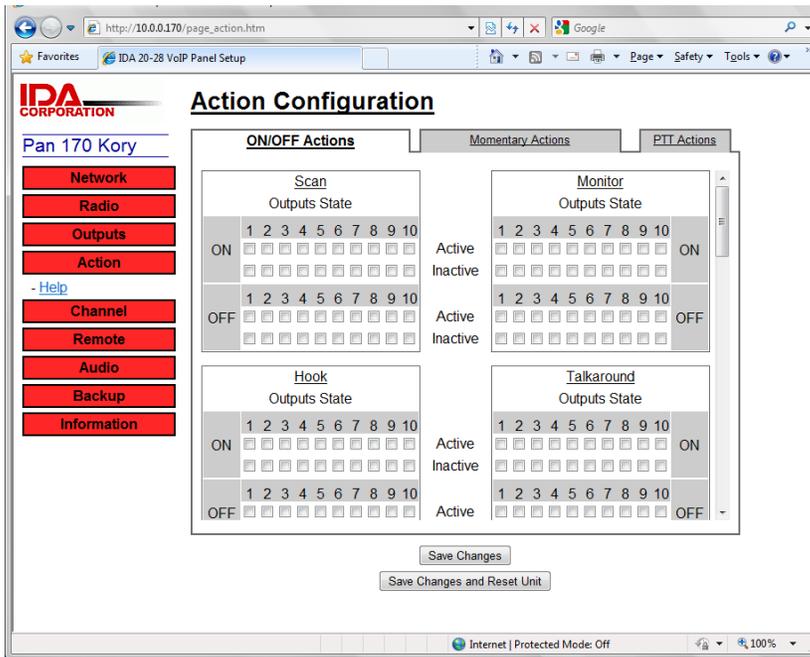

Channel

The screen below shows the Channel Parameters.

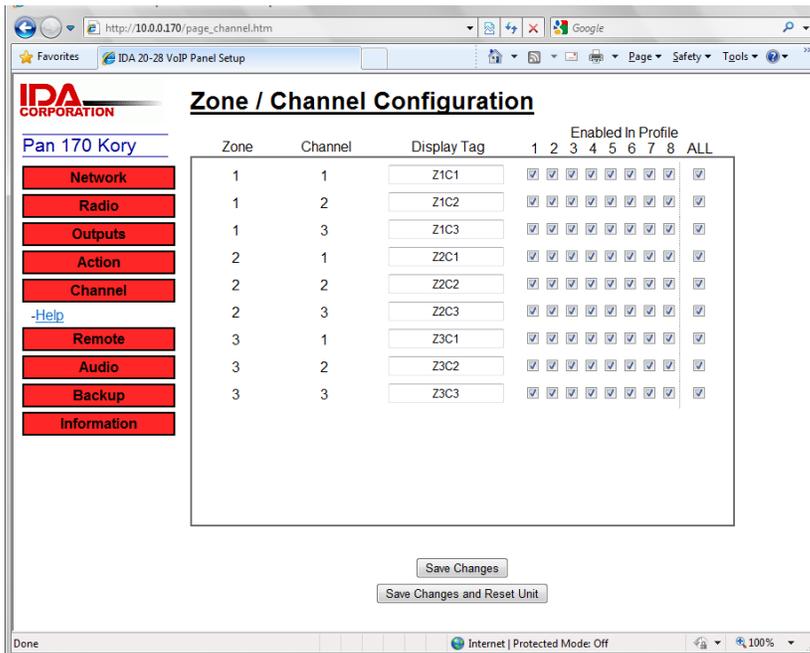

4.1 Programming Parameters (cont.)

Remote Configuration

The screen below shows the Remote Configuration.

The screenshot shows the 'Remote Configuration' page in a web browser. The page title is 'IDA 20-28 VoIP Panel Setup - Windows Internet Explorer'. The URL is 'http://10.0.0.170/page_home.htm'. The page features a navigation menu on the left with buttons for Network, Radio, Outputs, Action, Channel, Remote, Audio, Backup, and Information. The main content area is titled 'Remote Configuration' and contains two sections: 'Home Button Configuration' and 'Panel TimeServer Configuration'. The 'Home Button Configuration' section has a table with 8 rows and 6 columns. The 'Panel TimeServer Configuration' section has radio buttons for 'No Panel Timeserver', 'Select Timeserver', and 'Alternate Timeserver', and a 'Use Internal Clock (GMT)' option with time and AM/PM fields. There are 'Save Changes' and 'Save Changes and Reset Unit' buttons at the bottom.

	Zone	Channel		Zone	Channel
Home #1	3	1	Home #2	3	1
Home #3	3	1	Home #4	1	1
Home #5	1	1	Home #6	1	1
Home #7	1	1	Home #8	1	1

Remote


The screen below shows the Remote Button Parameters for Profile 1.

The screenshot shows the 'Profile 1 Configuration' page in a web browser. The page title is 'IDA 20-28 VoIP Panel Setup - Windows Internet Explorer'. The URL is 'http://10.0.0.170/page_profile.htm?1'. The page features a navigation menu on the left with buttons for Network, Radio, Outputs, Action, Channel, Remote, Audio, Backup, and Information. The main content area is titled 'Profile 1 Configuration' and contains two sections: 'Profile 1 Keypad Buttons' and 'Profile 1 Accessory Buttons'. The 'Profile 1 Keypad Buttons' section has a grid of dropdown menus for Zone Up, Channel Up, Internal Mic PTT, Zone Down, Channel Down, Clock, Timed Mute, Talkaround, and Alert. The 'Profile 1 Accessory Buttons' section has dropdown menus for On Hook, Off Hook, Monitor On, and Monitor Off. There are 'Save Changes' and 'Save Changes and Reset Unit' buttons at the bottom.

4.1 Programming Parameters (cont.)


Remote

The screen below shows the Miscellaneous Configuration for profile 1.

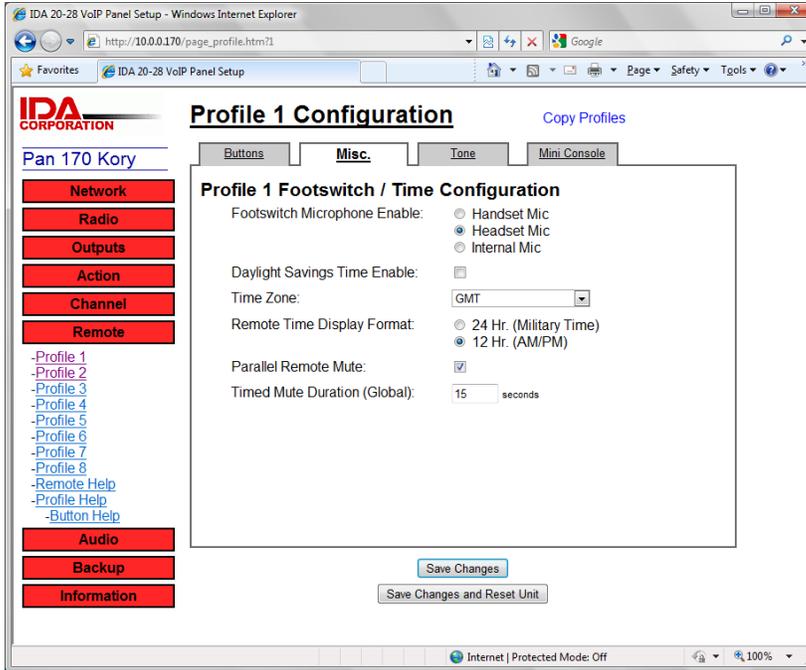

Remote


The screen below shows the Remote Tone Configuration for profile 1.

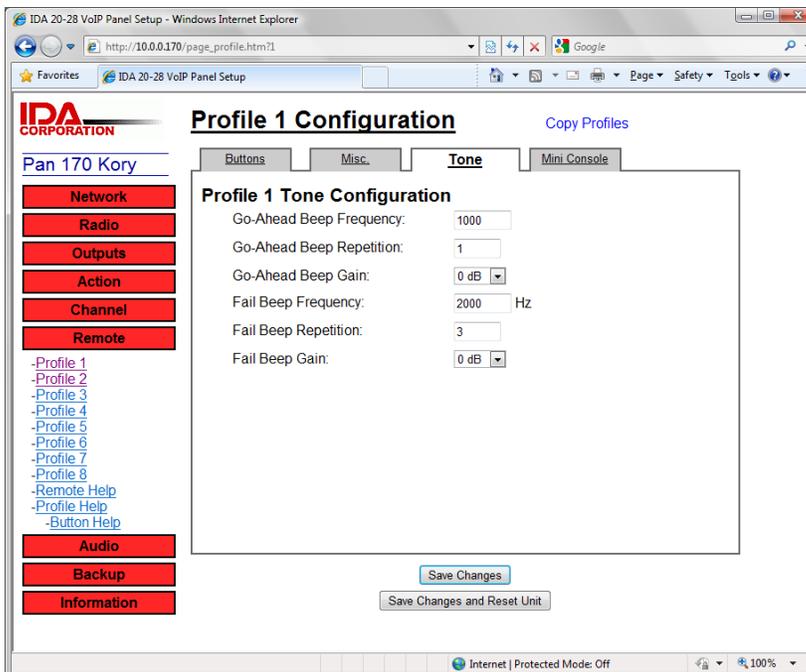

4.1 Programming Parameters (cont.)

Remote


The screen below shows the Mini Console Configuration for profile 1.

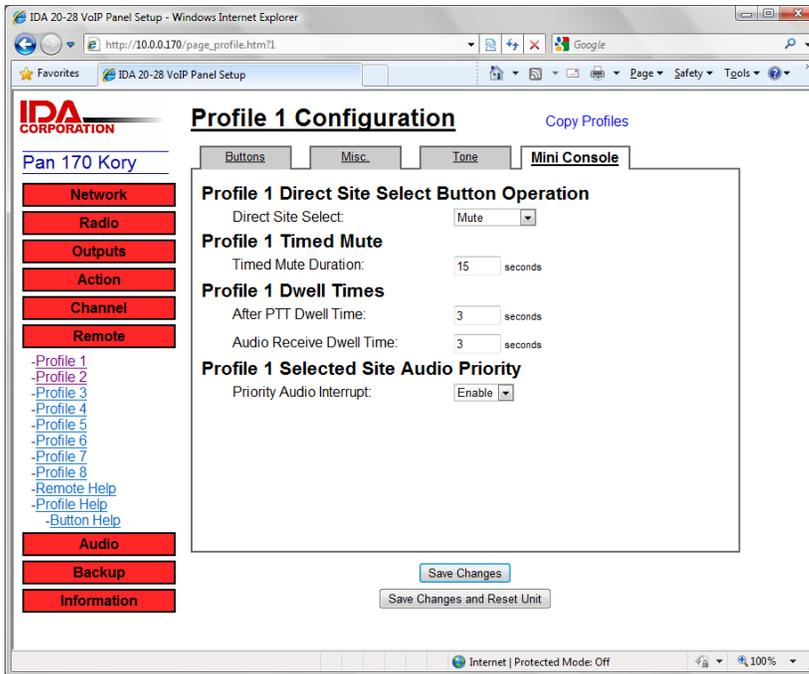

4.2 Audio Adjustments


Audio

The screen below shows the System Audio Configuration tab.

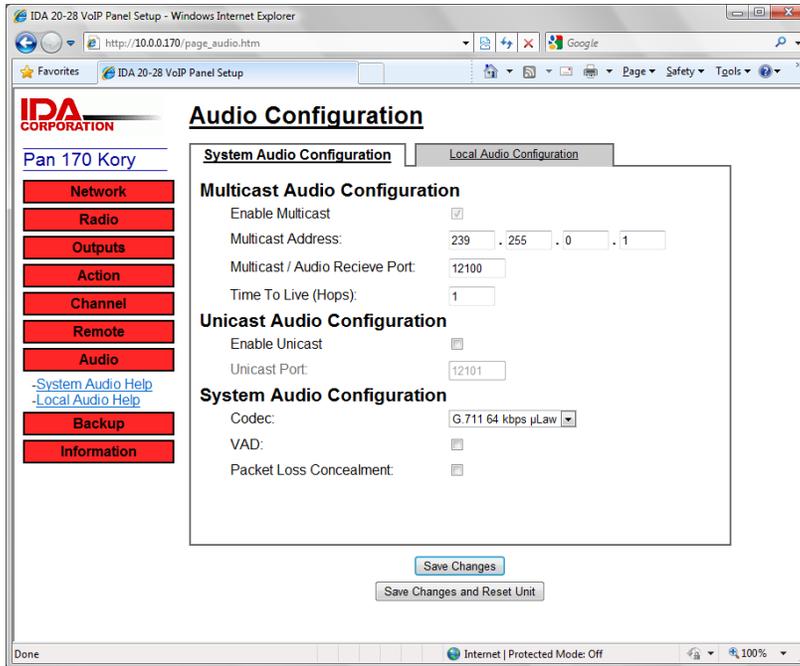


Audio

The screen below shows the Local Audio Configuration tab.

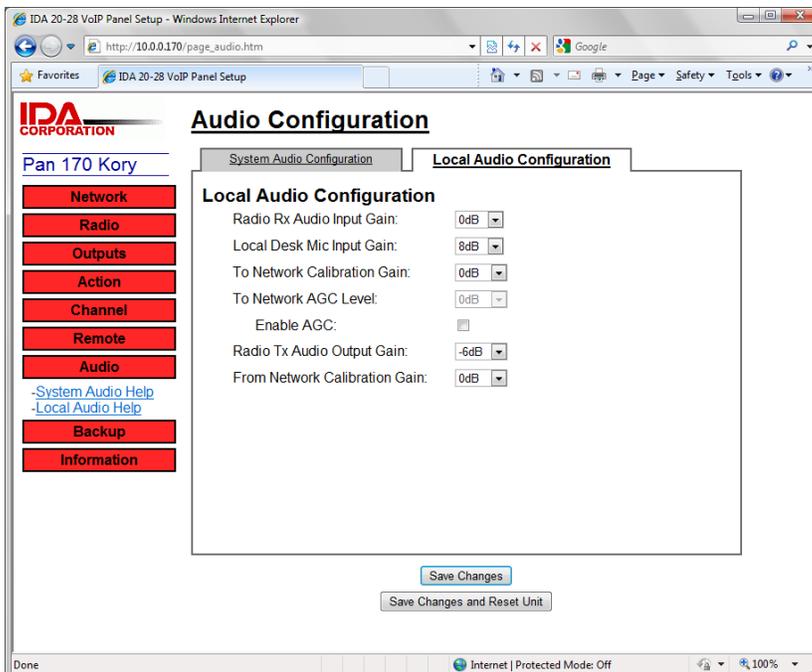

4.3 Backup/Restore

The screen below shows the Backup / Restore feature.

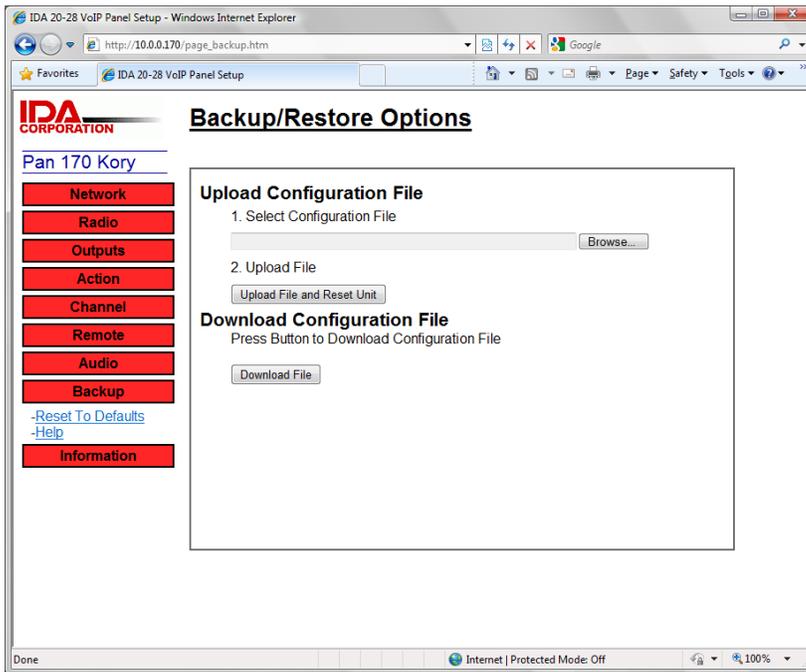

4.4 Information/Status

The screen below shows the Local Information tab.

The screenshot shows a web browser window titled "IDA 20-28 VoIP Panel Setup - Windows Internet Explorer". The address bar shows "http://10.0.0.170/page_info.htm". The page content includes the IDA Corporation logo and the title "IDA 20-28 Information / Status". On the left, there is a sidebar with a navigation menu for "Pan 170 Kory" containing buttons for Network, Radio, Outputs, Action, Channel, Remote, Audio, Backup, and Information, along with a "-Help" link. The main content area has two tabs: "Local Information" (selected) and "Remote Information". Under "Local Information", there is a "Panel Information" section with the following details:

Unit Name:	Pan 170 Kory
Firmware Version:	Ver 1.800
Radio Type:	Kenwood TKx180
IP Address:	10.0.0.170
Subnet Mask:	255.255.255.0
Gateway:	10.0.0.1
MAC Address:	00:50:C2:37:A1:4D
Audio Port:	12101

Information

The screen below shows the Remote Information tab.

The screenshot shows the same web browser window as above, but with the "Remote Information" tab selected. The "Local Information" tab is now inactive. The "Remote Information" section displays a table with the following data:

Slot	Name	IP Address	Audio Mode	Disconnects
1	Dave 1	10.0.0.176	Multicast	3
2	Half Ton	10.0.0.180	Multicast	2
3	REM 171 Demo	10.0.0.171	Multicast	46
4	-	-	-	-
5	-	-	-	-
6	-	-	-	-
7	-	-	-	-
8	-	-	-	-
9	-	-	-	-
10	-	-	-	-
11	-	-	-	-
12	-	-	-	-
13	-	-	-	-
14	-	-	-	-
15	-	-	-	-
16	-	-	-	-
17	-	-	-	-

Below the table is a "Clear Disconnects" button.

5.0 CIRCUIT DESCRIPTION

The 20-28 VoIP consists of two circuit boards. One circuit board is the 20-28 VoIP Ethernet/Audio platform. The other circuit board is the 20-28 VoIP Interface board used to make all of the radio and power connections.

5.1 Power Supply

Power is supplied to the 20-28 VoIP via the optional 15VDC wall transformer or the switched B+ output from the radio. The polarity of the connector must be correct. It is connected at J18 on the 20-28 VoIP Interface board. It is sent to J10 on the 20-28 VoIP Interface board, then to J10 on the 20-28 VoIP board. From J10 the power is routed through a diode D7 and a 1 amp fuse F1. Diode D7 prevents a reverse polarity from harming the 20-28 VoIP. Power is fed into voltage regulator U18. The output voltage of U18 is set to 10.5. This 10.5 Vdc through a diode D4 drives the audio section of the 20-28 VoIP. It is also fed into voltage regulator U19 and U20. The output voltage of U19 is set to 3.3 Vdc and this 3.3 Vdc is also fed into voltage regulator U16. The output voltage of U16 is set to 1.5 Vdc. The output voltage of U20 is set to 2.5 Vdc. The 3.3 Vdc, 2.5 vdc, and the 1.5 Vdc powers the digital section of the 20-28 VoIP.

5.2 Transmit Audio

Transmit audio UDP packets from the Ethernet interface section are passed to the microprocessor U8 for decoding. The decoded digital audio is then sent to the DSP U10. The DSP then converts the digital audio to analog and adjusts the level out. The audio is passed to pin 4 of J3 to the 20-28 VoIP Interface board where it is sent to pin 21 of the radio interface connector P1.

The audio is also fed into the speaker driver U3. U3 and its associated circuitry is a wide band audio amplifier set to have a gain of 36 dB. The output of the speaker driver goes to pin 7 of J4 and sent to the 20-28 Interface board where it is sent to the speaker jack J16.

5.3 Receive Audio

Receive audio from the radio comes from pin 1 of the radio interface connector P1. It is then passed to pin 4 of J5 on the 20-28 VoIP board. The audio is biased by resistors R126 and R136. The audio then passed through the DSP U10 where it is converted to digital. The digital audio is then sent to the microprocessor to be assembled in to UDP packets. The UDP Packets are then passed to the Ethernet section.

5.4 Outputs

The output states are controlled by U17 on the 20-28 VoIP board. The outputs are then sent to the open collector output drivers U2 and U3 on the 20-28 VoIP Interface Board via J13. Outputs 9 and 10 are optionally connected to relay outputs by JP7 and JP8.

5.5 Local Control

The local control is done through the 20-28 VoIP Interface board. The local desk microphone is connected to J15, which is connected to J5 passing all connections directly to the DSP, U10 on the 20-28 VoIP board where the audio, PTT and monitor functions are processed. The intercom switch is connected to J4 which connects to the DSP. The local speaker audio is sent from the DSP to the audio amplifier U3 and then sent to J4 on the 20-28 VoIP Interface board where it is sent to J16, the speaker jack.

5.6 Microprocessor

The Net+ARM 7520B MCU U8 provides the network interface functions and provides the platform for the application code. Integrated peripherals include a 10/100 Ethernet MAC, two serial ports, and numerous general-purpose I/O pins. An RTOS and a TCP/IP stack are included along with drivers for the internal peripherals.

5.7 Digital Signal Processor

The DSP U10 provides the audio processing functions. This DSP has six audio inputs, four audio outputs, a single Sigma-Delta CODEC, and an audio multiplexor to connect the CODEC to one audio input and one audio output. It also has numerous general-purpose I/O pins and a host interface. The DSP firmware comes pre-programmed in ROM and the functions provided can be controlled by the host CPU U8 through the host interface. The DSP firmware provides the following standard CODEC algorithms: G.711, G.723.1, and G.726.

5.8 Ethernet Interface

The Ethernet interface consists of a three port 10/100 Base-TX Switch U4. One port is connected externally to the LAN and the second port is connected externally to a computer to allow the computer access to the LAN. The third port is connected internally to the Ethernet port of the NET+ARM MCU U8. LEDs integrated into the Ethernet connectors will provide Connect and Activity status. The Ethernet port for connecting to the PC will be cross-wired to allow straight-through cables to be used on both ports.

5.9 20-28 VoIP Interface Board

The 20-28 VoIP Interface board provides the connections between the 20-28 VoIP board and the radio, power, and local control components. Items not covered thus far are described here. P1 pin 1 is the RX audio input. It is connected to J4 pin 5 on the 20-28 VoIP board where it goes to the DSP. Transmit audio comes from the DSP and goes to J3 pin 4 on the 20-28 VoIP Interface board and goes through impedance resistors to P1 pin 21. P1 pin 25 is the COR input. It goes through Q3 to J2 pin 2 on the 20-28 VoIP board then to the DSP. P1 pin 9 is the transmit indicator input. It goes through Q4 then to J11 pin 2 on the 20-28 VoIP board then to the DSP. P1 pins 2 and 3 are serial data in and out. The signals are selectable for RS485 or logic level by SW1. The signals go to J8 pins 3 & 4 on the 20-28 VoIP board then to the Net+ARM MCU.

APPENDIX A - RADIO INTERFACES

This appendix contains instructions for interfacing the 20-28 VoIP panel for various radio applications.

Conventional Binary Interface

The following steps outline the procedure for interfacing a conventional radio requiring binary control signals to the 20-28 VoIP:

1. Identify which radio functions should be controlled by the 20-28 VoIP. The available functions of the conventional binary interface on the 20-28 VoIP are described below.
 - **COR:** Control signal from the radio that is active while receiving audio.
 - **PTT:** Control signal from the 20-28 VoIP that is active when the radio should transmit.
 - **Channel Control Outputs:** Control signals from the 20-28 VoIP to change the channel on the radio through binary output patterns. The number of outputs used for channel control can be programmed from 1 to 8. Consult the table below for the number of outputs required. Note that output #1 will always be the least significant output. Outputs #2 to #8 not used for channel control are available as user defined outputs.


Number of Channel Outputs	Max. # of Channels
1	2
2	4
3	8
4	16
5	32
6	64
7	128
8	255

- **User Defined Outputs:** Several additional outputs are available for controlling other radio functions.
2. Construct the cable end that will connect to the 20-28 VoIP's P1 Radio connector. A generic cable kit is available from IDA Corporation (Part No. 102-OPT371). The following table lists the connections required to a DB25 male connector for each 20-28 VoIP function.

Connection	Function
Pin #1	RX Audio
Pin #7	Ground
Pin #20	+13.8 Vdc
Pin #21	TX Audio
Pin #25	COR
Output #1-7 User-programmable	Channel Output Pattern
Output #8	User Defined
Output #9	PTT
Output #10	User Defined

Conventional Binary Interface (cont.)

3. Connect the other end of the cable to the radio. This may require modifications to the radio. Consult the radio manual for details.
4. Configure the jumpers on the 20-28 VoIP based on the system requirements. Check the audio level adjustments.

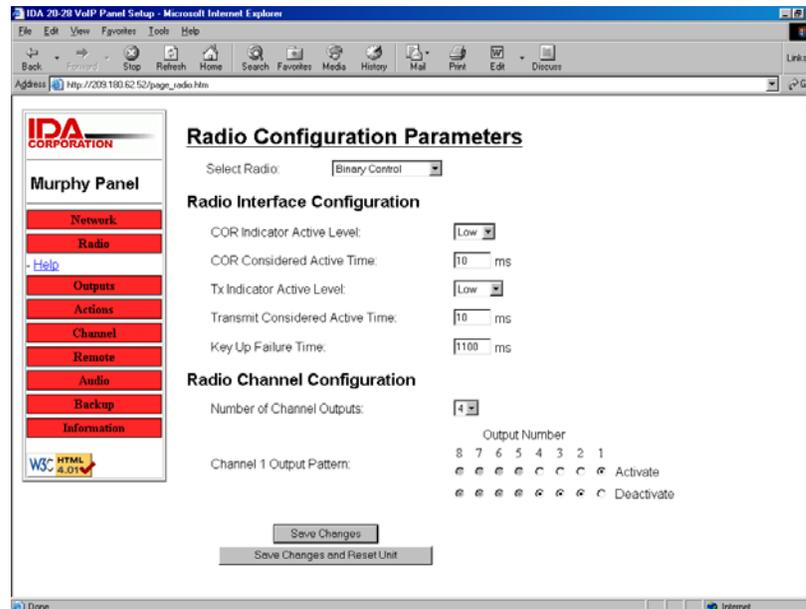

Trunking Radio Interface

The 20-28 VoIP may also be interfaced to a trunking radio for transmit and receive only with no channel or scan control. Full featured, radio model specific interfaces are available, contact the factory. In order to provide handshake tones in a trunking application, it is necessary to utilize the TRANSMIT INDICATOR input on the 20-28 VoIP. The TRANSMIT INDICATOR input is on Pin 9 of P1. The 20-28 VoIP must also be programmed for the correct TX Active HI / LOW polarity under the RADIO PARAMETERS screen as shown above. It needs to remain active throughout the entire transmission. For conventional applications it should be set to IGNORE.

Additional Radio Interfaces

For radio specific interfaces, refer to the Radio Configuration Parameters screen of the 20-28 VoIP or contact the factory for the availability of updates for additional radio interfaces.

PARTS LISTS

20-28 VoIP Main Board

Item	Reference	Description	Part No.	Qty
1	C1,2,12,25,28,44,46	CAP, A ELEC 47UF 6.3	381-0470R	7
2	C3,8	CAP, A ELEC 1UF 50V	381-5105R	2
3	C4,45	CAP, A ELEC 47UF 16V	381-2470R	2
4	C5,6,13,15,50,51,52,53,54,55, 56,57,58,59,60,61,63,64,65,66, 68,69,70,71,72,73,74,75,76,77, 78,79,80,81,82,83,84,85,86,87, 88,89,90,91,92,93,94,95,96,97, 98,99,100,101,102,104,105,106, 107,108,109,110,111,112,113, 114,115,116,117,118,119,121	CAP, .1UF X7R 16V	375-2104R	72
5	C7,11,17,18,20,21	CAP, A ELEC 10UF 16V	381-2106R	6
6	C9	CAP, A ELEC 2.2UF 35	381-4225R	1
7	C10,120	CAP, .47UF Y5V 16V	375-2474R	2
8	C14,26	CAP, A ELEC 4.7UF 25	381-3475R	2
9	C16,37,38,42,48	CAP, A ELEC 470UF 25	381-3471R	5
10	C19,47	CAP, A ELEC 150UF 10	381-1151R	2
11	C22,31,32,33,34	CAP, .1UF X7R 16V	375-2104R	5
12	C23,24	CAP, 22PF NPO 50V	375-5220R	2
13	C29,30,67,103	CAP, 10PF NPO 50V	375-5100R	4
14	C35,39,40	CAP, .01UF X7R 10%50	375-5103R	3
15	C36	CAP, 2700PF X7R 50V	375-5272R	1
16	C41,43	CAP TANT, 1UF 35V	392-4105R	2
17	C49	CAP .22UF Y5V 16V	375-2224R	1
18	C62	CAP, .1UF X7R 16V	375-2104R	1
19	D1,2,9,10	DIODE, SWITCH BAS16	110-2201R	4
20	D3,5	DIODE, SCHKY B140	110-2302R	2
21	D4,7,8	DIODE, SCHKY B330A	110-2301R	3
22	D6	LED, SUPER RED 0603	112-0201R	1
23	F1	FUSE PC MOUNT 1 AMP	290-0008	1
24	J1	JACK MOD, RJ45 LED	234-0121	1
25	J2	RECEPT 36 SIP .1	234-0032	.03
26	J3	RECEPT 36 SIP .1	234-0032	.03
27	J4	RECEPT 36 SIP .1	234-0032	.19
28	J5	RECEPT 36 SIP .1	234-0032	.11
29	J6	JACK MOD, RJ45 LED	234-0120	1
30	J7	CONN 36 POS R/A HDR	231-1236	0.14
31	J8	RECEPT 36 SIP .1	234-0032	.14
32	J9	CONN. 6 POS POST	231-1006	1
33	J10	RECEPT 2 POS .1	234-0033	1
34	J11	RECEPT 36 SIP .1	234-0032	.11
35	J13	SCKT, DIP, 16 PIN IC	220-0001	1
36	L1,5,6,7,8,9	FERRITE, 150 OHM 800	306-2001R	6

37	L3	POWER IND, 47.00uH	306-3001R	1
38	L4	POWER IND, 33.00uH	306-3002R	1
39	P1	HDR 14 POS .1 X .1	231-1076	1
40	R1	RECEPT 36 SIP .1 X2	234-0032	.06
41	R2,3,18,19,21,22,23,25,26,35, 49,113,116,118,119,130,131, 133	RES, 49.9 1% 1/16W	322-49R9R	18
42	R4,5	RES, 2K 5% 1/10W	323-1202R	2
43	R7,10,13,30,48,51,52,53,54,56, 58, 71,76,80,83,86,107,108,111, 112 120,125,132,134	RES, 10K 5% 1/10W	323-1103R	23
44	R9,12,14,15,55,78,79,81,82,98, 105,106,115,123,124,128	RES, 0 5% 1/10W	323-0000R	13
45	R11,47,122	RES, 10 5% 1/10W	323-1100R	3
46	R17,20	RES, 100 1% 1/16W	322-1000R	2
47	R32,33,37,39,40,41,42,44,45,46	RES, 33 5% 1/10W	323-1330R	10
48	R34,38,43	RES, 820 5% 1/10W	323-1821R	3
49	R36,61,62,63,64,65,66,89,95,96 97,99,101,102,103,104,109,127 129,136	RES, 1K 5% 1/10W	323-1102R	20
50	R50	RES, 499K 1% 1/16W	322-4993R	1
51	R60	RES, 56 5% 1/10W	323-1560R	1
52	R67	RES, 10M 5% 1/10W	323-1106R	1
53	R68	RES, 9.31k 1% 1/4W	326-9311R	1
54	R69	RES, 7.87k 1% ¼ W	326-7871	1
55	R70	RES, 7.15K 1% 1/4W	326-7151R	1
56	R72	RES, 300 5% 1/10W	323-1301R	1
57	R73	RES, 1k 1% 1/4W	326-1001R	1
58	R74,75	RES, 75K 5% 1/10W	323-1753R	2
59	R77	RES, 0 5% 1/10W	323-0000R	1
60	R90	RES, 2.7K 5% 1/10W	323-1272R	1
61	R94	RES, 1M 1% 1/16W	322-1004R	1
62	R110	RES, 3.01K 1% 1/16W	322-3011R	1
63	R121	RES, 1 5% 1/10W	323-11R0R	1
64	R126	RES, 620 5% 1/10W	323-1621R	1
65	U1	IC, 24LC256	131-1060	1
66	U2	IC, MCP3221A5T-I/OT	131-5001	1
67	U3	IC, TPA1517DWPR	131-1061	1
68	U4	IC, KS8993	131-2009	1
69	U5,15	IC, SN74AHC1GO8DBVR	131-5002	2
70	U6	IC, TC1270TERCT-ND	131-5003	1
71	U7	IC, SN74AHC1GO8DBVR	131-5002	1
72	U8	IC, NS7520B-1-C55	131-6000	1
73	U9,14	IC, HY57V161610DTC-7	131-1064	2
74	U10	IC, VP101X12BQC-1	131-2010	1
75	U11	IC, MAX3232ESE	131-1062	1
76	U12	IC, SN74LVC1GU04DBVR	131-5005	1
77	U13	IC, AM29LV800BT120	131-1063	1
78	U16	IC, LP3984IMF-1.5	131-5004	1
79	U17	IC, XC9572XL-10PC44C	131-3010	1

80	U18	IC, LM2673S-ADJ	131-4001	1
81	U19	IC, LM2673S-3.3	131-4002	1
82	U20	IC, LM1086CS-5.0	131-4003	1
83	U21	IC, LM1086CS-2.5	131-4004	1
84	Y2	CRY, 18.432 MHZ 20PF	305-0101R	1
85	Y3	CRY, 25.000MHZ 18PF	305-0103R	1
86	Y4	CRY, 4.096MHA 20PF	305-0102R	1
87	00	PC BD, VoIP RMT MAIN	900-0291	1

PARTS LISTS (Cont.)**20-28 VoIP Panel Interface Board**

Item	Reference	Description	Part No.	Qty
1	0	PEM 4-40 X 5/8 THRD	200-119	4
2	0	PC BOARD VIOP PANEL	900-0300	1
3	C1,2	CAP, .1UF X7R A6V	375-2104R	2
4	J13	POST, MACHINED 9 PIN	231-1088	2
5	J3,4,8,11,17A	HDR 16 POS .100 POST	231-3116	1.06
6	J10	CONN, 2 POS .1 LOCK HDR	234-0019	1
7	J18	CONN, R/A POWER	234-0014	1
8	JP5,6,7,8	CONN 36 POS BKWY HDR	231-1040	.30
9	K1,2	RELAY, PC MOUNT MINI	700-0010	2
10	P1	NUT, HEX 4-40	199-0010	2
11	P1	SCW, 4-40 X ¼ PHLP	199-3055	2
12	P1	CONN DB25 R/A PC MNT	231-0004	1
13	Q1,2,3,4	TRANS, 2N7002	180-1003R	4
14	R2,3	RES, 100 OHM 5% 1/8 W	321-1101R	2
15	R20	RES, 510 OHM 5% 1/8 W	321-1511R	1
16	R1,17,18,19	RES, 10K OHM 5% 1/10 W	323-1103R	4
17	R5	RES, 300 OHM 5% 1/10 W	323-1301R	1
18	R4,6,7,8,9,10,11,12,13,14,15	RES, 4.7K OHM 5% 1/10 W	323-1472R	11
19	SW1	SWITCH, DPDT DIP 6PS	611-0048	1
20	U2,3	IC, ULN2003A	131-1075	2
21	U1	IC, DS1487M	131-1076	1

20-28 VoIP Panel Interface Board Local Control Option

1	J15	JACK, MOD 4 POS SIDE	231-0021	1
2	J2,5,17A,17B	HDR 16 POS .100 POST	231-3116	.44
3	J16	JACK, SPKR PNL MNT	234-0091	1
4	R16	POT, 50K SLIDE/AUDTAP	340-0003	1
5	SW2	SWITCH, SUB MIN PUSH PC	611-0044	1


PARTS LISTS (Cont.)

20-28 VoIP Panel Cabinet

Item	Description	Part No.	Qty
1	S/N LBL IDA PRODUCT	199-6009	1
2	HOLE PLUG .250 BLK	203-1150	1
3	CABLE ETHERNET 10FT	800-2080	1
4	REARPLT GEO ANODIZED	900-6062A	1
5	CAB, VOIP PANEL	900-6086	1
6	FACEPLATE, V PAN AND	900-6087A	1
7	FACEPLATE, VOIP PANEL	900-0687B	1
8	FACEPLATE, V PAN SCRND	900-0687S	1


20-28 VoIP Panel Cabinet Local Control Option

Item	Description	Part No.	Qty
1	MOULDED PLUG #DCP 3.5	234-0050	1
2	20-28 FACEPLT ANOD	900-6063A	1
3	20-28 FACEPLATE BARE	900-6063B	1
4	20-28 FACEPLT SCRND	900-6063S	1

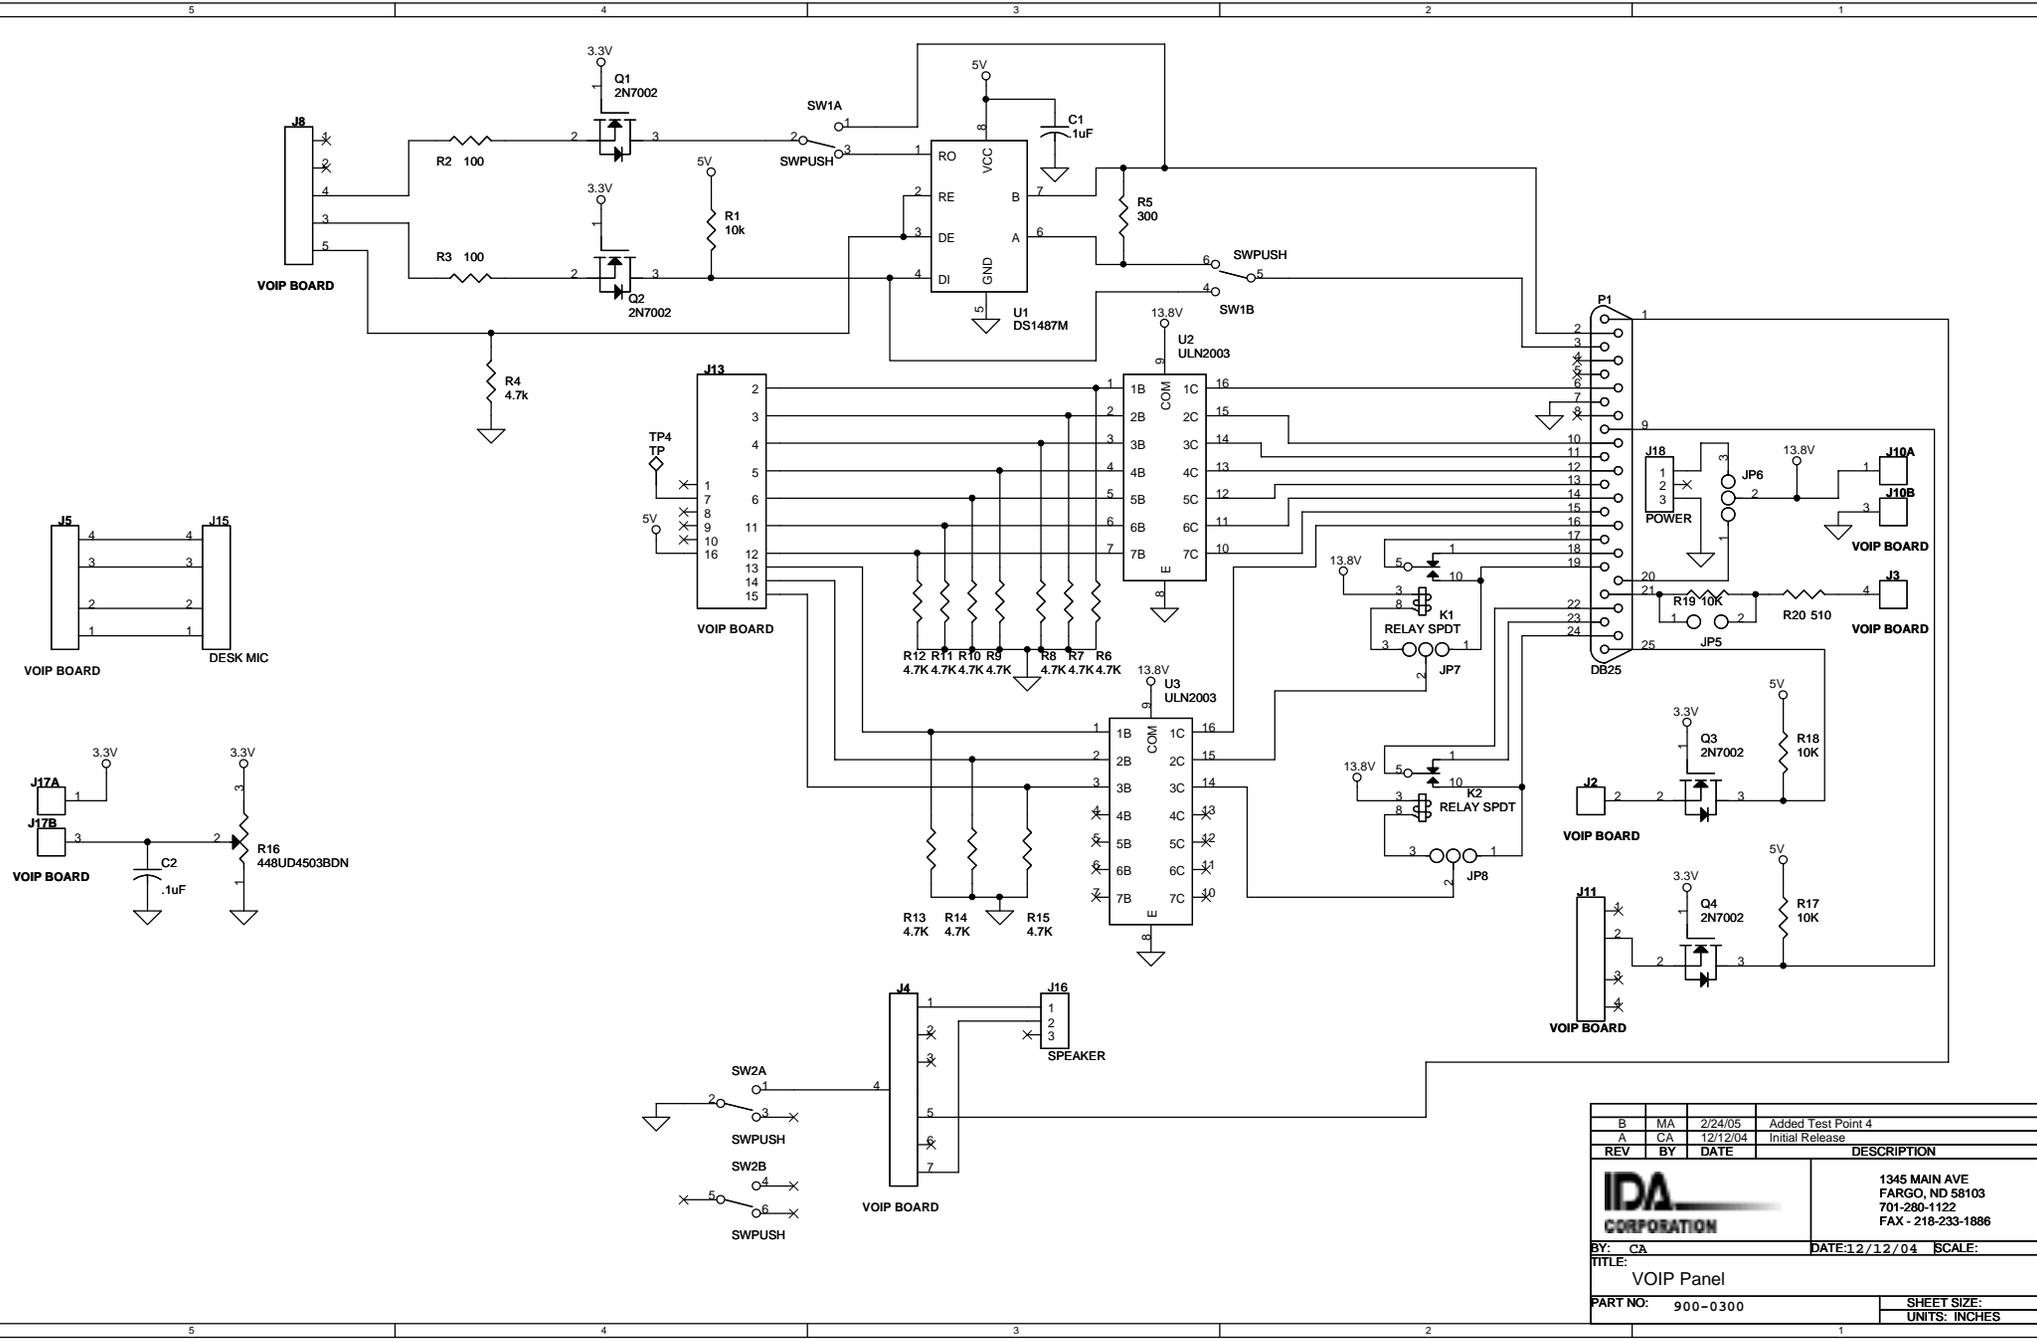

B	MA	2/24/05	Added Test Point 4
A	CA	12/12/04	Initial Release
REV	BY	DATE	DESCRIPTION
IDA CORPORATION		1345 MAIN AVE FARGO, ND 58103 701-280-1122 FAX - 218-233-1886	
BY:	CA	DATE:12/12/04	SCALE:
TITLE: VOIP Panel			
PART NO: 900-0300		SHEET SIZE:	
		UNITS: INCHES	

Multicast / Unicast Typical Installation Example

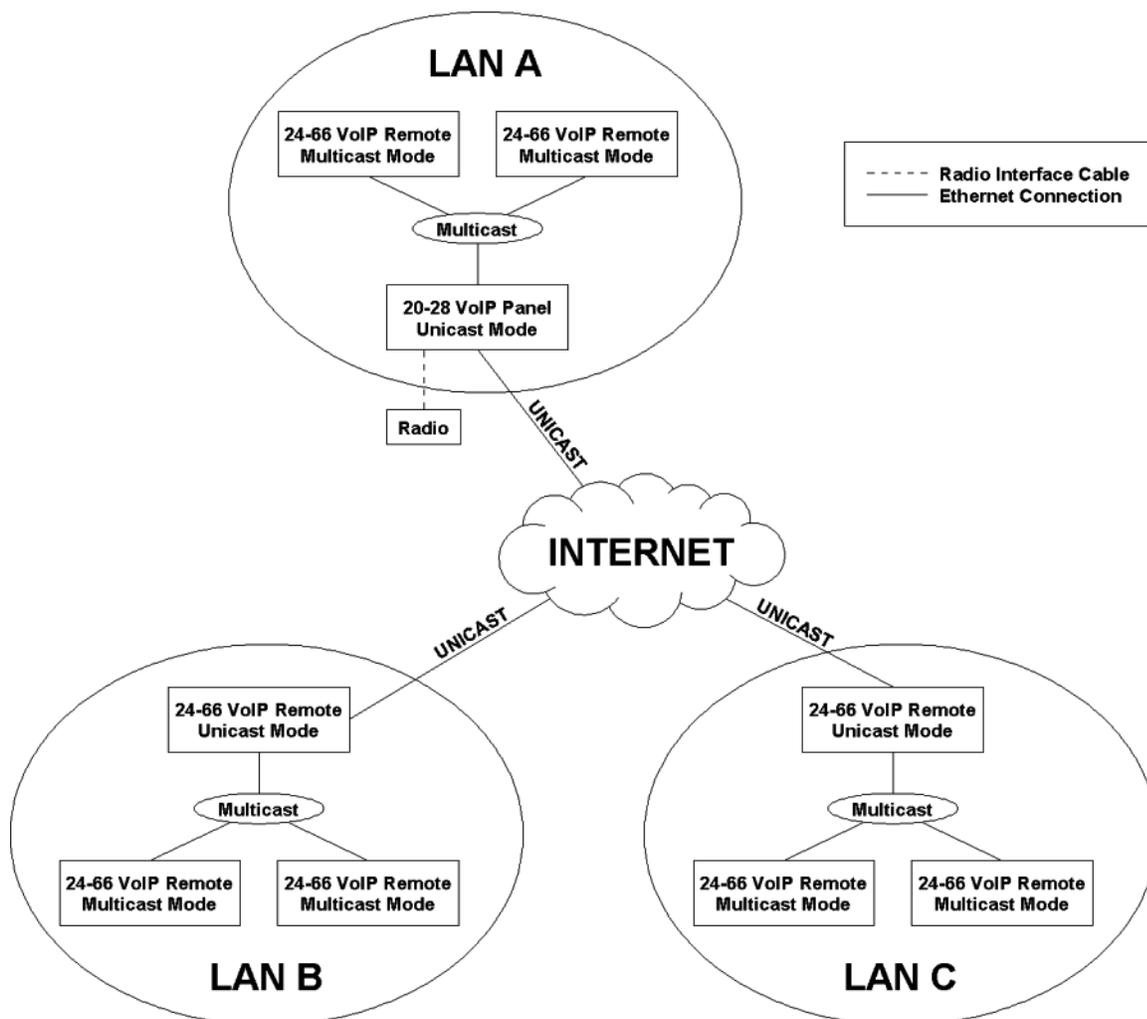

Since Multicast across the Internet is not supported in all most cases, the 20-28 VoIP and the 24-66 VoIP units connected to the Internet can be configured for Unicast. The 20-28 VoIP (at one LAN) and any 24-66 VoIP's (at other LAN's) connected to the Internet are configured for Unicast. The remaining 24-66 VoIP's at each LAN are configured for Multicast. The units configured for Unicast also provide a Multicast repeat of the audio to the remaining units at their particular LAN.

Note: The 24-66 MC does not support Multicast repeat of the audio to the remaining units at their LAN.

